

Snow-Cone Machine Instructions

Thank you for renting a Snow-Cone Machine from Baystate Tent & Party. Please follow the directions below for delicious snow-cones for your event. If you have any questions or problems please do not hesitate to contact us at (978) 851 2002. Enjoy your snow-cones!!!



Important Precautions:

- The Sno-Cone Machine can take ice cubes or blocks of ice broken into pieces approximately 3" - 4" in size. The ice will not fit in the shaver if the pieces are too large.
- The design of the shaving chute automatically draws the ice against the blade. There is no need for manual effort.
- Never allow any foreign or metallic objects around the shaver area of the machine. Ice picks or scoops can damage blades, and debris may end up in the shaved ice.

Operating the Machine:

1. Place Machine on clean, level surface.
2. Plug in power cord into the appropriate electrical outlet.
3. Turn on the motor and the display lights. Motor will come to full speed in a minute or so.
4. Fill the gooseneck to within an inch of the top with ice cubes or block ice (no larger than 3 to 4 inches in size. 3-4" pieces produce the best snow.
5. Press the pusher handle down against the ice in the gooseneck.
6. Apply firm and even pressure to make the best snow.
Practice will allow you to gauge when to stop pressing.
7. Using syrup dispenser, squirt syrup over ice. 1 to 3 squirts is usually enough.
One bottle of syrup serves between 50-75 cones, depending on amount of syrup used.

Notes:

You may find that you need to relieve the pressure two or three times in a cycle. Over-pressing will stall the motor. In this case, simply relieve the pressure and try again. Too much pressure will result in snow that is coarse. Too little pressure will make the snow mushy.

- Under normal operating conditions, the motor will become very warm.
- A surface temperature of 150F degrees is normal.

Leave the cleaning to us!

