## Popcorn Machine Instructions

Thank you for renting a popcorn machine from Baystate Tent & Party. Please follow the directions below for to make delicious popcorn for your event. If you have any questions or problems please do not hesitate to contact us at (978) 851 2002. Enjoy!

## **Important Precautions:**

- o Machine needs to be plugged into a 110-volt dedicated circuit to operate properly.
- o Always have the kettle and motor switch OFF when not popping corn.
- The kettle will get very hot! ALWAYS USE CAUTION.
- Water must NEVER be put on the popping KETTLE!
- Never lift machine from top section.

## **Operating Machine:**

- 1. Plug in machine.
- 2. Push kettle lid up to the top of cabinet.
- 3. Turn HEAT and LIGHT switch to ON (Wait 3-4 minutes for kettle to heat up).
- 4. When ready to add oil and popcorn, turn KETTLE MOTOR switch ON to start the motor.
- 5. Open the oil pouch and pour into the kettle.
- 6. Immediately add the popcorn. (DO NOT OVERFILL: only pop one popcorn pack at a time.)
- 7. Pull the kettle lid downward from the top of the cabinet to cover the kettle. DO NOT FORGET TO COVER THE KETTLE OR THE OIL AND POPCORN WILL IMMEDIATELY SPRAY OUT ALL OVER THE SIDES OF THE MACHINE.
- While the corn is popping open the plexiglass doors slightly to prevent fogging.
- 9. Popcorn will pop quickly (2-3 minutes), and when the popping ceases, TURN BOTH THE KETTLE HEAT AND MOTOR SWITCH OFF.
- 10. Lift the kettle lid and dump popped corn by releasing the kettle, rotating the handle clockwise and pulling downward.
- 11. Put the kettle back in place using the handle to hook the kettle to the holding bolt. USE CAUTION THE KETTLE IS VERY HOT!
- 12. Repeat steps 2-12 for additional batches. Each popcorn kit makes approximately 6 servings (small bags provided).
- 13. If you are making several batches continuously you do not have to wait for machine to reheat. It will already be pre-heated.
- 14. Remember to turn HEATING LIGHT SWITCH to ON in order to keep your popcorn warm.
- 15. When finished, please remove all unused popcorn.









