

Spin Art Instructions

Thank you for renting a Spin Art Machine from Baystate Tent & Party. Please follow the directions below for delightful spin art creations for your event. If you have any questions or problems please do not hesitate to contact us at (978) 851 2002. Enjoy!





There are two methods to creating Spin Art.

Method #1:

1. Place the 5x7 card stock in the paper tray.
2. Make sure the edges of the paper are within the tray edges.
3. Squeeze small drops or lines of paint onto the card stock. Multiple colors of paint may be used-and are recommended for the best pictures.
4. Close the lid of the machine. The tray will start to spin.
5. After a few seconds, raise the lid to stop the tray from spinning.
6. When the tray has come to a complete stop remove the artwork.

Method #2:

1. Place the 5x7 card stock in the paper tray.
2. Make sure the edges of the paper are within the tray edges.
3. Close the lid of the machine. The tray will start to spin.
4. Squeeze a few drops of paint through the slot in the lid, onto the card stock. Multiple colors may be used – and are recommended for the best pictures.
5. Raise the lid to stop the tray from spinning.
6. When the tray has come to a complete stop remove your artwork.
7. Now all you have to do is show off your masterpiece!

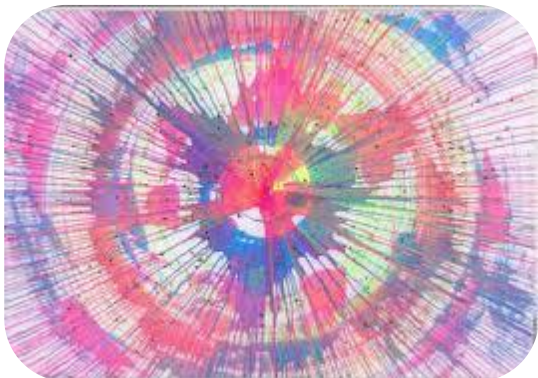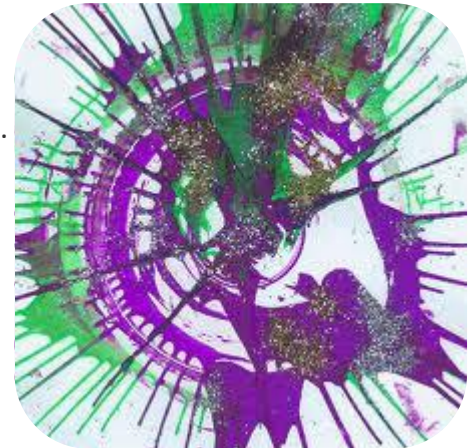

Leave the cleaning to us!